# **User's Manual**


## Safety Instructions

- 1.Make sure your battery has enough voltage for the controller to recognize the battery type before first installation.
- 2. The battery cable should be as short as possible to minimize
- 3. The regulator is suitable for lead acid batteries (Flood, AGM, GEL )and lithium ions, (note the use of please controller is arranged for the right type of battery) it is not suited for nickel metal hydride, or other batteries.
- 4. The charge regulator is only suitable for regulating solar modules.never connect another charging source to the charge
- 5. The controller will be hot when it is working, Please install the controller on a smooth, well ventilated surface.

#### Product Features

- 1.Build-in industrial micro controller.
- 2. Big lcd display, all adjustable parameter.
- 3. Fully 3-stage pwm charge management.
- 4. Build-in short-circuit protection, open-circuit protection, reverse protection, over-load protection.
- 5. Dual mosfet reverse current protection, low heat production.

## LCD Display/Key

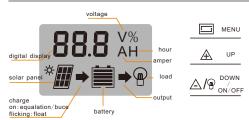


menu:switch between different display, or to enter/exit setting by long press.

up:press to increase value. down:press to decrease value.


## **System Connection**

- 1. Connect the battery to the charge regulator-plus and minus. 2. Connect the photovoltaic module to the regulator-plus and
- 3. Connect the consumer to the charge regulator-plus and minus.

The reverse order applies when deinstalling! An improper sequence order can damage the controller!

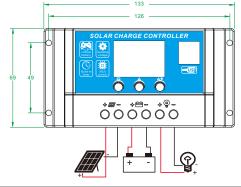

#### Display/Setting

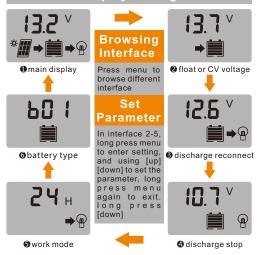

Attn:1.Press the [down] button to on/off load manully at main display.

2.The work mode is working as below:

[24H]Load output 24 hours
[1-23H]Load on after sunset and closed after setting hours
[0H]Dusk to dawn

#### Trouble Shooting

Situation	Probable Cause	Solution			
Charge icon not on when sunny	Solar panel opened or reversed	Reconnect			
Load icon off	Mode setting wrong	Set again			
	Battery low	Recharge			
Load icon slow flashing	Overload	Reduce load watt			
Load icon fast flashing	Short circuit protection	Auto reconnect			
Power off	Battery too low/ Reverse	Check battery/ Connection			

## **Technical Parameter**

Model	1210	1220		1230		4820		T	4830		
System Voltage	12V/24V AUTO					48V					
Charge Current	10A	20A		30	30A		20A		30A		
Discharge Current	10A	20A		30	30A		20A		30A		
Max Solar Input	<50V <80V										
Battery Type	b01 Sea	1 Sealed b02			GEL	b03			Flood		
Equailzation	14.4V 14.				2V	14.6			1.6V		
Float Charge	13.7V (defaul,adjustable)										
Discharge Stop	10.7V (defaul,adjustable)										
Discharge Reconnect	12.6V (defaul,adjustable)										
Battery Type	b04 Iron lithium Iron 4 Strands 5 5			5 nium nds	lithi	um ion I		lit 4	b07 hium ion Strands		
Constant Charging Voltage	2 6\/*4/*E					4.2V*3/*4					
Recovery Charge Voltage	3.4V*4/*5				4.0V*3/*4						
Low Voltage Protection	2.6V*4/*5				3.1V*3/*4						
Low Voltage Recovery	2.9	3.7V*3/*4									
b04~b07 Parameters can not be set											
USB Output	5V/2A										
Self-consume	<10mA										
Operating Temperature	-35~+60℃										

\*All red color voltage \*2,\*4 while using 24V/48 system.

Size/Weight

\*Product specifications are subject to charge without prior notice.

133\*70\*34mm/154a